Dell™ W2600 26 インチワイド液晶モニタ (TV 機能付) Dell™ W2600 26" Wide LCD Monitor (With TV Functionality)





Dell™ ワイド液晶モニタ (TV 機能付) オーナーズマニュアル

メモ、注意、警告

✓ メモ:ワイド液晶モニタの操作上、知っておくと便利な重要情報が記載されています。

注意: ハードウェアの損傷やデータの損失の可能性があることを示し、その危険を回避するための方法を説明しています。

♠ 警告:物的損害、けがまたは死亡に至る可能性があることを示します。

Dell Inc. の書面による許諾を受けることなく、このマニュアルを複製することは、どのような形態であっても厳しく禁じられています。このマニュアルで使用されている商標: Dell、DELLのロゴ。 FRS (ではSurround XT、SRS、および (o) は SRS Labs, Inc. の商標です。このマニュアルでは、上記以外の商標や会社名を使用して、マークや名称の権利を主張する団体、もしくはその団体の製品に言及している場合があります。これらの商標や会社名は、当社のものを除き、一切 Dell Inc. に所属するものではありません。

2004年8月 Rev. A00

このマニュアルに記載されている情報は、将来予告なしに変更されることがあります。

^{© 2004} Dell Inc. All rights reserved.

目次

1	ワイド液晶モニタの概要	
	前面	į
	右側面	j
	左側面	,
	下面	;
	同梱品)
	ワイド液晶モニタのお手入れ	
2	ワイド液晶モニタのセットアップ	
	ワイド液晶モニタの適切な設置場所13	}
	ワイド液晶モニタの接続	}
3	リモコン	
	電池の挿入	
	リモコンの使用	
	汎用リモコンまたは学習機能付きリモコンによる ワイド液晶モニタの使用	ı
	7 1 1 /Km C = 7 / 7 Km	
4	オンスクリーンディスプレイの使用	
	リモコンによる OSD の使用	,
	OSD 言語の選択	j
	入力の選択 メニュー	j
	ピクチャ メニュー	,
	オーディオ	;
	PIP/POP/PBP	;

	チャンネルセットアップ	29
	スリープタイマー・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	29
	OSD 設定	30
	カードリーダ・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	30
5	ワイド液晶モニタのトラブルシューティング	
	トラブルシューティングのヒント	33
	一般的な問題	34
	OSD メッセージ	38
	リモコンの問題・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・・	39
	カードリーダの問題	39
	ワイド液晶モニタをコンピュータに接続しているときの Self-Test 機能の使用	40
	ワイド液晶モニタをモニタとして使用するときの問題	40
6	ワイド液晶モニタの仕様	
泰)	21	/17

ワイド液晶モニタの概要

前面




赤外線受光部

リモコンからの信号を受信します。

2 電源インジケータライト (LED)


ワイド液晶モニタがオンのときは青色、省電力モードのときは 黄色が表示されます。

右側面

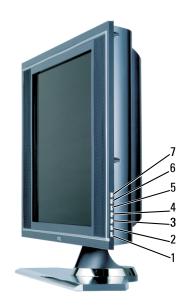


1	電源ボタン	ワイド液晶モニタの電源のオン / オフを切り替えます。
2	OSD メニューボタン	OSD(オンスクリーンディスプレイ)を有効にします。
3	ボリュームボタン	ボリュームを下げるか、OSD 内を移動します。
4	ボリュームボタン	ボリュームを上げるか、OSD 内を移動します。
5	チャンネルボタン	前のチャンネルを選択するか、OSD 内を移動します。
6	チャンネルボタン	次のチャンネルを選択するか、OSD 内を移動します。
7	Input Source ボタン	Input Select メニューを表示します。

左側面

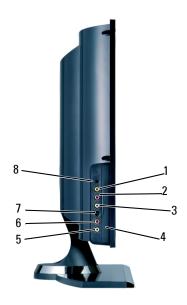

1	コンポジットビデオコネクタ (AVI)	ビデオゲームシステムなど、一時的に接続する外部機器用に 側面のコンポジットコネクタを使用します。
2	R (コンポジット右オーディオ コネクタ)	コンポジットコネクタ(AVl)に外部機器を接続した場合、 このオーディオコネクタを使用します。
3	L(コンポジット左オーディオ コネクタ)	コンポジットコネクタ(AV1)に外部機器を接続した場合、 このオーディオコネクタを使用します。
4	カードリーダパネル	カードリーダを取り付ける場合は、このパネルを取り外します。
5	L(S ビデオ左オーディオコネクタ)	S ビデオコネクタ (AV3) に外部機器を接続した場合、この オーディオコネクタを使用します。
6	R(S ビデオ右オーディオコネクタ)	S ビデオコネクタ (AV3) に外部機器を接続した場合、この オーディオコネクタを使用します。
7	S ビデオコネクタ (AV3)	ビデオカメラなど、一時的に接続する外部機器用に側面の S ビデオコネクタを使用します。
8	ヘッドフォンコネクタ	ヘッドフォンを接続します。

下面

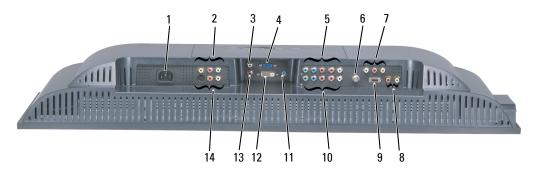

1	電源コネクタ	電源コードを接続します。
2	コンポジットビデオおよびオー ディオコネクタ(AV2)	ビデオデッキや DVD プレーヤなどの外部機器を接続します。
3	DVI オーディオコネクタ(L)	DVI コネクタに外部機器を接続した場合、この DVI オーディ オコネクタを使用します。
4	VGA コネクタ	ワイド液晶モニタをコンピュータのモニタとして使用するには、この VGA コネクタを使用します。
5	コンポーネントオーディオおよび ビデオコネクタ(AV6)	DVD プレーヤ、衛星放送受信機、ケーブルテレビチューナーなどの外部機器を接続します。
6	ANT/Cable	アンテナまたはケーブルテレビチューナーを接続します。
7	コンポジットオーディオ / ビデオ 出力コネクタ	ANT/Cable コネクタにアンテナまたはケーブルを接続した場合に、ビデオデッキなどの外部機器を接続します。
8	D4 オーディオコネクタ	D4 コネクタに外部機器を接続した場合、この D4 オーディオコネクタを使用します。
9	D4 コネクタ	DVD プレーヤなどの外部機器を接続します。
10	コンポーネントオーディオおよび ビデオコネクタ(AV5)	DVD プレーヤ、衛星放送受信機、ケーブルテレビチューナーなどの外部機器を接続します。
11	コンピュータ用オーディオ コネクタ	コンピュータからのオーディオケーブルをワイド液晶モニタに 接続します。
12	DVI コネクタ	DVD プレーヤ、セットトップボックス、コンピュータなどの 外部機器を接続します。
13	DVI オーディオコネクタ(R)	DVI コネクタに外部機器を接続した場合、この DVI オーディ オコネクタを使用します。
14	S ビデオコネクタ(AV4)	ビデオゲームシステムや DVD プレーヤなどの外部機器を接続

します。

同梱品



✓ メモ: ワイド液晶モニタにコンポーネントケーブルは付属していません。

リモコン



単四乾電池 (2)



電源ケーブル



Sビデオケーブル



オーディオケーブル (2)



コンポジットケーブル



DVI ケーブル



コンピュータ用 オーディオケーブル






マニュアル






ワイド液晶モニタのお手入れ



♠ 警告:ワイド液晶モニタの修理は、許可された専門家だけが行ってください。ワイド液晶モニタを 分解しないでください。



- パネルの表面をクリーニングするには、柔らかくて糸くずのないきれいな布に少し水を含ませ ます。
- ワイド液晶モニタのキャビネットをクリーニングするには、中性洗剤を少し含ませた布を使用 します。
- ベンゼン、シンナー、アンモニアなどの化学薬品や、研磨用の洗浄剤は使用しないでください。
- 圧縮空気でワイド液晶モニタをクリーニングしないでください。

ワイド液晶モニタのセットアップ

⚠ 警告:ここで説明する操作を行う前に、『製品情報ガイド』にある「安全にお使いいただくために」 の説明に従ってください。

ワイド液晶モニタの適切な設置場所

ワイド液晶モニタの設置場所については、環境面に関する以下の要素を考慮してください。

- 高温、直射日光、厳しい冷気にさらされる場所で、ワイド液晶モニタを使用したり保管したり しない。
- 温度差の激しい場所間でワイド液晶モニタを移動することを避ける。詳細については、「仕様」 を参照してください。
- ワイド液晶モニタに激しい振動や強い衝撃を与えない。ワイド液晶モニタを車のトランク内に 置かない。
- 湿度が高い場所やほこりの多い場所で、ワイド液晶モニタを使用したり保管したりしない。
- 水などの液体がかかる場所にワイド液晶モニタを置かない。

ワイド液晶モニタの接続

ワイド液晶モニタには、4種類の標準コネクタが装備されています。

品質 ケーブルおよびコネクタ

良



同軸 (RF) は、1本のケーブルで映像と音声 を伝送します。ワイド液晶モニタの同軸コネ

使用時の注意

クタには、ANT/Cable というラベルが付いて います。このコネクタの場所については、 8ページの「下面」を参照してください。



品質 ケーブルおよびコネクタ

使用時の注意

良



コンポジットは、1本のケーブルでビデオ信 号を伝送します。コンポジットビデオコネク 夕を使用する場合は、コンポジットオーディ オケーブルも接続する必要があります。この コネクタの場所については、7ページの「左 側面」と8ページの「下面」を参照してくだ さい。

優




Sビデオでは、ビデオ信号を白黒信号とカ ラー信号の2つに分割します。Sビデオコネ クタを使用する場合は、オーディオ用の AV ケーブルも接続する必要があります。これら のコネクタの場所については、7ページの 「左側面」と8ページの「下面」を参照して ください。

最良



コンポーネントでは、ビデオ信号を2つのカ ラー信号と1つの白黒信号の3つに分割しま す。必ず、5つのケーブルすべてを接続して ください。このコネクタの場所については、 8ページの「下面」を参照してください。

ANT/Cable (同軸) コネクタの使用

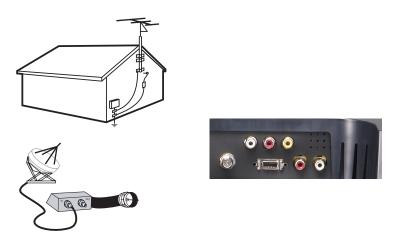

- 1 ワイド液晶モニタの電源を切り、電源コードを抜きます。
- **2** 同軸ケーブルをワイド液晶モニタの ANT/Cable コネクタに接続します。
- 3 ワイド液晶モニタの電源コードを差し込み、ワイド液晶モニタの電源を入れます。
- 4 OSD (オンスクリーンディスプレイ) に入り、**TV** を選択します。26ページの「入力の選択 メ ニュー」を参照してください。

コンポジットビデオコネクタの使用



1 ワイド液晶モニタの電源を切り、電源コードを抜きます。

✓ メモ:ビデオカメラなど、取り外し可能な外部機器を接続する場合は、ワイド液晶モニタの側面に あるコンポジットビデオコネクタを使用します。

- 2 オーディオケーブルを含めて外部機器を接続します。
- 3 ワイド液晶モニタと外部機器の電源コードを差し込み、それらの電源を入れます。
- **4** OSD に入り、適切なコンポジット入力を選択します。26 ページの「入力の選択 メニュー」を 参照してください。

Sビデオコネクタの使用



- 1 ワイド液晶モニタの電源を切り、電源コードを抜きます。
- ✓ メモ:ビデオカメラなど、取り外し可能な外部機器を接続する場合は、ワイド液晶モニタの側面に ある S ビデオコネクタを使用します。
- 2 オーディオケーブルを含めて外部機器を接続します。
- 3 ワイド液晶モニタと外部機器の電源コードを差し込み、それらの電源を入れます。
- **4** OSD に入り、適切な S ビデオ入力を選択します。26 ページの「入力の選択 メニュー」を参 照してください。

コンポーネントコネクタの使用



- 1 ワイド液晶モニタの電源を切り、電源コードを抜きます。
- 2 オーディオケーブルを含めて外部機器を接続します。
- **3** ワイド液晶モニタと外部機器の電源コードを差し込み、それらの電源を入れます。
- **4** OSD に入り、適切なコンポーネント入力を選択します。26 ページの「入力の選択 メニュー」 を参照してください。

D4 コネクタの使用



- 1 ワイド液晶モニタの電源を切り、電源コードを抜きます。
- 2 オーディオケーブルを含めて外部機器を接続します。
- **3** ワイド液晶モニタと外部機器の電源コードを差し込み、それらの電源を入れます。
- 4 OSD に入り、適切なコンポジット入力を選択します。26 ページの「入力の選択 メニュー」を 参照してください。

DVIコネクタの使用

- 1 ワイド液晶モニタの電源を切り、電源コードを抜きます。
- 2 カバーを手前に引いて持ち上げて、ワイド液晶モニタから背面カバーを取り外します。



3 白の DVI ケーブルとオーディオケーブルを接続します。 ビデオ外部機器を使用する場合は、オーディオコネクタ (赤と白)を使用します。コンピュー タを接続する場合は、コンピュータ用オーディオコネクタ(緑)を使用します。

もあります。詳細については、ケーブルテレビチューナーの製造元に問い合わせてください。





- 4 背面カバーを元に戻します。
- **5** ワイド液晶モニタと外部機器の電源コードを差し込み、それらの電源を入れます。
- 6 OSD に入り、**DVI** を選択します。26 ページの「入力の選択 メニュー」を参照してください。


VGA の使用

VGA コネクタを使用すれば、ワイド液晶モニタをコンピュータのモニタとして使用できます。

- - 1 ワイド液晶モニタの電源を切り、電源コードを抜きます。
 - 2 カバーを手前に引いて持ち上げて、ワイド液晶モニタから背面カバーを取り外します。



3 青の VGA ケーブルを、ワイド液晶モニタとコンピュータに接続します。

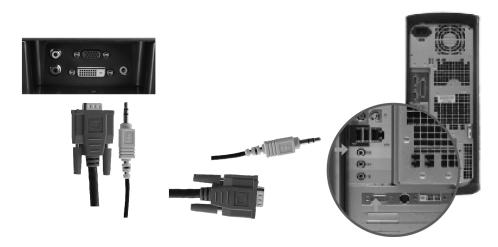

- 4 緑のオーディオケーブルを、ワイド液晶モニタのコネクタとコンピュータに接続します。
- 5 背面カバーを元に戻します。
- 6 ワイド液晶モニタと外部機器の電源コードを差し込み、それらの電源を入れます。
- 7 OSD に入り、**VGA** を選択します。26 ページの「入力の選択 メニュー」を参照してください。

リモコン


電池の挿入

リモコンを使用する前に、単四電池2本を挿入します。

- **1** 電池カバーをはずします。
- 2 電池を挿入します。電池の + と を、電池挿入部に記された + と の印に合わせてください。
- 3 電池カバーを閉じます。



リモコンの使用

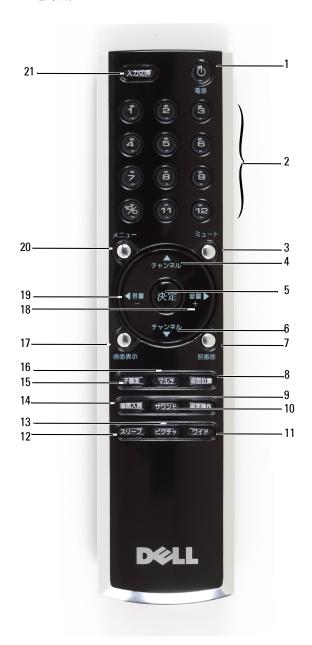

1	電源ボタン	ワイド液晶モニタの電源のオン / オフを切り替えます。
2	数字ボタン	ボタンを押してチャンネルを選択します。
3	ミュート	音を消します。もう一度押すと、音が出ます。
4	チャンネル(上向	次のチャンネルを表示します。
	きアイコン)	OSD 内では、チャンネルボタンを使用して OSD(オンスクリーンディスプレイ)のメニュー間を移動します。
5	決定	OSD オプションの選択、チャンネル選択の確認を行い、 カードリーダモードではイメージの選択を行います。
6	チャンネル(下向	前のチャンネルを表示します。
	きアイコン)	OSD 内では、チャンネルボタンを使用して OSD(オンスクリーンディスプレイ)のメニュー間を移動します。
7	前画面	前に表示していたチャンネルに戻ります。
8	画面位置	ピクチャーインピクチャー (PIP) ウィンドウの位置を変更 します。
9	画面操作	ピクチャーインピクチャー (PIP)、ピクチャーアウトピク チャー (POP)、またはピクチャーバイピクチャー (PBP) の使用時に、ウィンドウを切り替えます。
10	サウンド	オーディオ のプリセットオプションを順に切り替えます。
11	ワイド	サイズ メニューのサイズオプションを順に切り替えます。
12	スリープ	スリープタイマーをオンにします。
13	ピクチャ	ピクチャ メニューのプリセットオプションを順に切り替え ます。
14	画面入替	PIP、POP、または PBP 使用時にイメージを入れ替えます。
15	子画面	PIP モードを開始 / 終了します。
16	マルチ	POP または PBP モードを開始 / 終了します。
17	画面表示	ワイド液晶モニタに関する情報を表示します(たとえば、 TV Mode の場合、現在視聴しているチャンネルが表示され ます)。
18	音量 +	ボリュームを上げます。
		OSD では、音量ボタンを使用してメニュー内を移動します。
19	音量 -	ボリュームを下げます。
		OSD では、音量ボタンを使用してメニュー内を移動します。
20	メニュー	OSD メインメニューを開始 / 終了します。
21	入力切換	入力の選択 メニューを開始 / 終了します。

汎用リモコンまたは学習機能付きリモコンによるワイド液晶 モニタの使用

プログラム済みの汎用リモコンのプログラミングを実行して、Dell ワイド液晶モニタに関する以下 の機能を制御することができます。

- 電源
- チャンネル上げ(+)
- チャンネル下げ(-)
- 音量上げ(+)
- 音量下げ(-)
- ミュート
- 入力の選択
- ▼ メモ:今後利用できるようになるプログラム済み汎用リモコンでは、制御可能な機能が増える可能 性があります。

以下の方法で、Dell ワイド液晶モニタで使用できるように汎用リモコンのプログラミングを実行で きます。

- リモコンに検索機能が付いている場合は、その機能を使用して正しいコードを見つけられる可 能性があります。
- リモコンに学習機能が付いている場合は、上に示したボタンに加えて、そのリモコンの特定の ボタンについて Dell のリモコンからプログラミングを実行できます。

✓ メモ:汎用リモコンの特定の操作については、リモコンのマニュアルを参照してください。

オンスクリーンディスプレイの使用

ワイド液晶モニタには、オンスクリーンディスプレイ(OSD)機能があります。OSD を使用する と、適切な入力源を選択したり、イメージやオーディオの設定を調整したり、ピクチャーインピク チャー、ピクチャーアウトピクチャー、ピクチャーバイピクチャーの表示を選択することができま す。また、カードリーダを使用するときのイメージの表示方法を選択したり、ワイド液晶モニタを コンピュータのモニタとして使用する場合にイメージを調整したりすることもできます。

リモコンによる OSD の使用

- ✓ メモ: ワイド液晶モニタの側面パネルまたはリモコンの音量ボタンとチャンネルボタンを使用して、 OSD にアクセスして選択を行うことができます。注記しないかぎり、ここではリモコンで OSD を 使用する方法について説明します。
- **1** OSD に入るには、メニュー ボタンを押します。 画面の底辺に沿って8つのアイコンが表示されます。



- 2 アイコン間を移動するには、左および右ボタン(音量ボタン)を使用します。 メニュー内を移動すると、移動先のアイコンが強調表示されます。
- **3** オプションを選択するには、そのアイコンが強調表示されたときに **決定** ボタンを押します。
- 4 オプションメニューでは、上および下(チャンネル)ボタンを使用してさまざまな設定に移動 します。
- ✓ メモ:オブション間を移動すると、設定の横に赤色の矢印が表示されます。選択されているオプショ ンの横にはチェックマークが表示されます。
- 5 上および下ボタン (チャンネルボタン) と決定 ボタンを使用して、設定を調整または選択し ます。

- ✓ メモ:終了を選択すればメインメニューに戻ることができ、メニューを押すと OSD を終了するこ とができます。
- 6 選択が終わったら、終了を選択します。
- **7** OSD を終了するには、リモコンの **メニュー** を押すか、メインメニューの **終了** を選択します。

OSD 言語の選択

- 1 メニュー を押して OSD に入ります。
- 2 セットアップ を選択します。
- **3 セットアップ** メニューの **言語** を選択し、OSD で表示する言語を選択します。

入力の選択 メニュー

入力の選択 メニューを使用すると、ワイド液晶モニタとビデオ装置をどのように接続しているかに 基づいて適切な入力源を選択できます。リモコンの **入力切換** を押すと、直接 **入力の選択** メニュー にアクセスできます。メニュー を押して、メインメニューから **入力の選択** を選択することもでき ます。



メモ:入力の表示では、アク ティブ または **すべて** を選択できま す。アクティブ を選択すると、使用 中のコネクタが検索されます。使用で きる入力源が白色で表示され、使用で きない入力源は灰色で表示されます。 すべて を選択すると、すべての入力 源が表示され、外部機器を接続してい ない場合でもすべての入力源を選択 できます。

VGA—ワイド液晶モニタをコン ピュータのモニタとして使用してい て、VGA ケーブルを使ってコン ピュータと接続している場合に選択 します。VGA コネクタの位置につい ては、8ページの「下面」を参照して ください。

DVI—セットトップボックスなどの外 部機器を DVI コネクタに接続してい る場合に選択します。 DVI コネクタ の位置については、8ページの「下面」 を参照してください。

TV—アンテナまたはケーブルを ANT/Cable コネクタに接続している場合に選択します。ANT/Cable コ ネクタの位置については、8ページの「下面」を参照してください。

AV1—ビデオゲームシステムなどのビデオ外部機器を、ワイド液晶モニタの側面のコンポジットコネクタ に接続している場合に選択します。コンポジットコネクタの位置については、7ページの「左側面」を参 照してください。

AV2—DVD プレーヤなどのビデオ外部機器を、ワイド液晶モニタの背面のコンポジットコネクタに接続 している場合に選択します。コンポジットコネクタの位置については、8ページの「下面」を参照してく ださい。

AV3—ビデオデッキなどのビデオ外部機器を、ワイド液晶モニタの側面の S ビデオコネクタに接続してい る場合に選択します。Sビデオコネクタの位置については、7ページの「左側面」を参照してください。

AV4—DVD プレーヤなどのビデオ外部機器を、ワイド液晶モニタの背面の S ビデオコネクタに接続して いる場合に選択します。S ビデオコネクタの位置については、8 ページの「下面」を参照してください。

AV5-衛星放送受信機などのビデオ外部機器をコンポーネントコネクタに接続している場合に選択しま す。コンポーネントコネクタの位置については、8ページの「下面」を参照してください。

AV6—DVD プレーヤなどのビデオ外部機器をコンポーネントコネクタに接続している場合に選択しま す。コンポーネントコネクタの位置については、8ページの「下面」を参照してください。

D4—DVD プレーヤなどのビデオ外部機器を、ワイド液晶モニタの背面の D4 コネクタに接続している 場合に選択します。D4 コネクタの位置については、8 ページの「下面」を参照してください。

✓ メモ:セットアップメニューにある OSD 設定で、接続中の外部機器を入力の選択に表示されるよ うに設定できます。たとえば、入力の選択メニューで、AV2に DVD が表示されるよう設定できます。

ピクチャ メニュー



以下のいずれかのプリセットイメージ 設定を選択すると、選択したコンテンツ に合わせて最良の画像を提供するよう、 個々の設定が自動的に更新されます。

- •映画
- ・スポーツ
- •弱信号
- •マルチメディア

パーソナル を選択すると、輝度 や 色 などの個々の設定を調整できます。

色温度のプリセットは以下のとおりです。

自然:固有のパネル温度

標準:6500K · 青色:9300K 赤色:5700K

オーディオ



ナイトモード — 音声とアクションシー ンの間の大きな音量変化を平滑化します。

SRS TruSurround XT— 任意の入力源か ら、2 つのスピーカで仮想的なサラウンド サウンドを実現します。深く豊かな低音 とともに、より広がり感のあるサウンド が生成されます。

以下のいずれかのプリセット サラウンド モード の設定を選択すると、個々のオー ディオレベルが自動的に更新されます。

- ・ミュージック
- •映画
- •音声

パーソナル を選択すると、低音 や 高音 などの個々のオーディオレベルを調整できます。

Program を使用して、ステレオ、モノラル、または **SAP** (Second Audio Program) を選択します。

PIP/POP/PBP

ピクチャーインピクチャー (PIP)、ピクチャーアウトピクチャー (POP)、またはピクチャーバイ ピクチャー(PBP)を使用すると、同時に複数のアクティブソースを表示できます。



メモ: リモコンの 子画面 ボタンまたは **マルチ** ボタンを使用して、PIP、POP、およ び PBP のオン / オフを切り替えることがで きます。

PIP、POP、または PBP モードでは、リ モコンの 画面入替 ボタンを使用して主 信号源と副信号源を切り換え、リモコン の 画面操作 ボタンを使用してウィンド ウ間で制御を切り換えます。

OSD で、PIP ウィンドウの 透明度、サイ ズ、水平位、および 垂直位 を調整できま す。水平位置を調整する場合には、- で ウィンドウが左に移動し、+ でウィンド

ウが右に移動します。垂直位置を調整する場合には、100 が画面の一番上、0 が画面の一番下にな ります。

POP の場合は、以下の3種類のPOPオプションを選択できます。

- POP1 1 個のウィンドウ
- POP3 3 個のウィンドウ
- POP12 12 個のウィンドウ

POP スキャンモード で、**順次** または **フロート** を選択できます。**順次** モードでは、各ウィンドウ に表示される選択済みチャンネルのソースが再生されます。フロート モードでは、各ウィンドウを 循環させることで、前もって選択されたチャンネルがすべて再生されます。循環はすべての使用可 能なチャンネルについて行われた後、最低のチャンネルから再度行われます。

チャンネルセットアップ



リモコンのキー番号と特定チャンネルの表示についてプログラミングを実行するには、チャンネル セットアップの xxx を使用します。

スリープタイマー

スリープタイマー を使用すると、ワイド液晶モニタが自動的にオフになるまでの時間を選択できま す。10分から3時間の間で選択できます。

OSD 設定

OSD 設定を使用すると、OSD の外観を調整したり、ワイド液晶モニタモードでのチャンネルを設 定したり、OSD の言語を変更したり(26 ページの「OSD 言語の選択」を参照)、出荷時の設定に 戻したりすることができます。



OSD 一時待機時間 を使用して、OSD が表示される時間を 増減します。最大時間は60秒です。

OSD 設定 メニューの ボタンロック を選択して、側面パネ ルのボタンをロックすることができます。このオプション が有効なときは、電源ボタンだけが機能します。音量上げ ボタンとチャンネル上げボタンを一緒に 10 秒間押したま まにすると、ボタンのロックが解除されます。

特定のチャンネルにリモコンのキー番号をプログラムし、 画面に表示する番号を選択するには、チャンネルセット アップ メニューの チャンネルの割り当て を選択します。

DVIコネクタを使用している場合は、以下の設定の確認が必要になる場合があります。

信号源 — 既定の設定は 自動 です。コンピュータ (PC) またはビデオ外部機器が使用されている 場合、ワイド液晶モニタは自動的にこれらの外部機器を検出します。イメージが正しく表示されな い場合は、使用中の外部機器に応じて、信号源として PC または ビデオ を選択することができます。

色 ─ 既定の色空間は RGB です。色が正しく表示されない場合は、設定を YUV に変更することが できます。

カードリーダ

カードリーダを使用すると、ワイド液晶モニタにデジタル写真を表示できます。



カードリーダでは、次の種類のカードがサポートされています。

- コンパクトフラッシュ
- SD メモリカード
- メモリースティック
- スマートメディア
- マルチメディアカード (MMC)
- ✓ メモ:カードリーダを購入される場合は、デルにお問い合わせください。



イメージ管理 メニューを使用すると、写真の表示方法 を選択できます。たとえば、スライドショーとして写 真を表示したり、写真を回転したり、写真ごとに異な るトランジションを選択したり、撮影日時などの写真 情報を表示したりすることができます。

ワイド液晶モニタのトラブルシューティング

/↑ 警告:ワイド液晶モニタから煙や火花が出ている場合は、ただちにワイド液晶モニタの電源コード を抜き、デルに連絡してください。トラブルシューティングは行わないでください。

トラブルシューティングのヒント

✓ メモ:ワイド液晶モニタに接続した外部機器に関連して、問題が発生する場合もあります。こうし た問題のトラブルシューティング情報については、ワイド液晶モニタに接続した外部機器のマニュ アルを参照してください。

ワイド液晶モニタの問題のほとんどは、正しい入力源を選択しなかったことによるものです。ワイ ド液晶モニタの各コネクタ (側面および下面) は1つの入力源に関連付けられていて、入力の選択 メニューではそれぞれに AV1 から AV6 までのラベルが付けられています。

- **AV1** ワイド液晶モニタの側面のコンポジットコネクタ
- **AV2** ワイド液晶モニタの下面のコンポジットコネクタ
- **AV3** ワイド液晶モニタの側面の S ビデオコネクタ
- **AV4** ワイド液晶モニタの下面の S ビデオコネクタ
- **AV5** ワイド液晶モニタの下面のコンポーネントコネクタ
- AV6 ワイド液晶モニタの下面のコンポーネントコネクタ

以下の入力源も選択できます。

- TV ワイド液晶モニタの下面の ANT/Cable コネクタ
- VGA ワイド液晶モニタの下面の VGA コネクタ
- **DVI** ワイド液晶モニタの下面の **DVI** コネクタ
- **D4** ワイド液晶モニタの下面の D4 コネクタ

一般的な問題

問題

DVD プレーヤやビデオデッキなどの 外部機器を使用しているとき、ワイド液晶 モニタの画質が悪い

考えられる解決策

- 1OSD で縦横比の設定をチェックします。リモコンの **メニュー** ボタンを押し、**サイズ** を選択します。OSD の使用法の詳細については、25ページの「オンスク リーンディスプレイの使用」を参照してください。
- 2同じタイプのコネクタを使用して外部機器を接続しな おします。たとえば、下面のコンポジットコネクタを 使用している場合は、ワイド液晶モニタの側面のコン ポジットコネクタに外部機器を接続します。コネクタ の位置については、5ページの「ワイド液晶モニタの 概要」を参照してください。

外部機器を接続したら、OSD で入力源を変更しま す。詳細については、26ページの「入力の選択メ ニュー」を参照してください。

3 異なるコネクタを使用して外部機器を接続します。た とえば、コンポジットコネクタの使用時に問題が発生 した場合は、コンポーネントコネクタを使用します。

メモ: 異なるコネクタに接続するには、そのコネクタに 合ったケーブルが必要です。サポートされるコネクタに ついては、お使いの外部機器のマニュアルを参照してく ださい。

外部機器を接続したら、OSD で入力源を変更しま す。詳細については、26ページの「入力の選択メ ニュー」を参照してください。

- 4出荷時の設定にリセットします。リモコンの メニュー を押し、セットアップ を選択して、出荷時 設定にリセット を選択します。
- **5**色温度を調整します。リモコンの メニュー を押し、 **ピクチャ** を選択して、**色温度** を選択します。

メモ:一部のセットトップボックスでは、縦横比を設定 できます。詳細については、お使いの外部機器のマニュ アルを参照してください。

問題

ANT/Cable (同軸) コネクタに接続した 外部機器を使用しているとき、ワイド液晶 モニタの画質が悪い

ワイド液晶モニタに何も表示されない

考えられる解決策

- 1入力の選択メニューで、ワイド液晶モニタが入力源 として選択されていることを確認します。詳細につい ては、26ページの「入力の選択メニュー」を参照し てください。
- 2 リモコンの メニュー を押し、セットアップ を選択し て、**チャンネルセットアップ** を選択します。これで、 チャンネルがリセットされます。
- 3 OSD で縦横比の設定をチェックします。リモコンの **メニュー** ボタンを押し、**サイズ** を選択します。OSD の使用法の詳細については、25ページの「オンスク リーンディスプレイの使用」を参照してください。
- 4 出荷時の設定にリセットします。リモコンの メニュー を押し、セットアップ を選択して、出荷時 設定にリセット を選択します。
- **5** 色温度を調整します。リモコンの **メニュー** を押し、 ピクチャ を選択して、色温度 を選択します。
- 6問題は接続した外部機器によるものかもしれません。 外部機器のメーカーに問い合わせてください。
- 1 ワイド液晶モニタの電源が入っていることを確認し ます。
- 2電源ケーブルも含めて、すべてのケーブルがワイド液 晶モニタに正しく接続されていることを確認します。
- 3ワイド液晶モニタの右下隅に、青色または黄色のライ トが点灯しているかどうかチェックします。青色のラ イトは、ワイド液晶モニタの電源が入っていることを 示します。黄色のライトは、ワイド液晶モニタが省電 カモードにあることを示します。
- 4入力の選択 メニューで、正しい入力源が選択されて いることを確認します。詳細については、26ページ の「入力の選択 メニュー」を参照してください。
- 5 現在、ワイド液晶モニタに接続されている外部機器を 接続しなおします。複数の外部機器を使用している場 合は、一度に1つの外部機器を接続してテストしま す。
- 6 正しく動作することがわかっている別の外部機器を接 続します。
- 7出荷時の設定にリセットします。 リモコンの メニュー を押し、セットアップ を選択して、出荷時 設定にリセット を選択します。

問題	考えられる解決策

音が出ない

- 1ミュートがオンになっていないことを確認します。 リモコンの ミュート ボタンを押すと、ミュート機能 のオン/オフが切り替わります。
- 2ワイド液晶モニタの特定のチャンネルだけで音が出な い場合は、入力の選択 メニューで正しい入力源が選 択されていることを確認します(詳細については、 26ページの「入力の選択 メニュー」を参照してくだ さい)。
- 3ワイド液晶モニタのオーディオ入力コネクタと、外部 機器のオーディオ出力コネクタの両方に、オーディオ ケーブルがしっかりと接続されていることを確認しま す。ケーブルの色とコネクタの色が一致していること を確認します。
- 4 オーディオケーブルがビデオケーブルと同じ列に接続 されていることも確認します。コネクタの位置につい ては、5ページの「ワイド液晶モニタの概要」を参照 してください。
- 5同じタイプのコネクタを使用して外部機器を接続しな おします。たとえば、下面のコンポジットコネクタを 使用している場合は、ワイド液晶モニタの側面のコン ポジットコネクタに外部機器を接続します。コネクタ の位置については、5ページの「ワイド液晶モニタの 概要」を参照してください。

外部機器を接続したら、OSD で入力源を変更しま す。詳細については、26ページの「入力の選択メ ニュー」を参照してください。

6 異なるコネクタを使用して外部機器を接続します。た とえば、コンポジットコネクタの使用時に問題が発生 した場合は、コンポーネントコネクタを使用します。

メモ: 異なるコネクタに接続するには、そのコネクタに 合ったケーブルが必要です。サポートされるコネクタに ついては、お使いの外部機器のマニュアルを参照してく ださい。

外部機器を接続したら、OSD で入力源を変更しま す。詳細については、5ページの「ワイド液晶モニタ の概要」を参照してください。

7別のワイド液晶モニタで外部機器をテストします。

メモ: PIP/POP/PBP を使用している場合は、正しい オーディオ信号源 が選択されていることを確認します。 リモコンの メニュー を押し、PIP/POP/PBP を選択し ます。

問題	考えられる解決策
DVD 使用時に画像が二重になる、 または画像が表示されない	DVD プレーヤのプログレッシブスキャンをオフにします。Dell™ ワイド液晶モニタには、DVD プレーヤのデインタレーサと同等以上の品質を持つデインタレーサが内蔵されています。DVD プレーヤのプログレッシブスキャンの詳細については、お使いの DVD プレーヤのマニュアルを参照してください。
画像が暗すぎる、または明るすぎる	OSD で色の設定を更新します。リモコンの メニュー を押し、 ピクチャ を選択します。
画面が中央に表示されない	1 OSD でサイズの設定を更新します。 リモコンの メニュー を押し、サイズ を選択します。 2 出荷時の設定にリセットします。 リモコンの メニュー を押し、セットアップ を選択して、出荷時 設定にリセット を選択します。
画面に1本または複数の線が表示される	 1 OSD で縦横比の設定をチェックします。リモコンのメニューボタンを押し、サイズを選択します。OSDの使用法の詳細については、25ページの「オンスクリーンディスプレイの使用」を参照してください。 2 入力の選択メニューで、正しい入力源が選択されていることを確認します。詳細については、26ページの「入力の選択メニュー」を参照してください。 3 別の外部機器を接続してみます。ケーブルが正しく接続され、OSDで入力源を更新していることを確認します。 4 OSD でサイズの設定を更新します。リモコンのメニューを押し、サイズを選択します。 5 出荷時の設定にリセットします。リモコンのメニューを押し、セットアップを選択して、出荷時設定にリセットを選択します。
側面パネルのボタンが機能しない	OSD で、ボタンがロックされているかどうかをチェックします。リモコンの メニュー を押し、 セットアップ を選択します。
	リモコンを使用できない場合は、ワイド液晶モニタの側面にある音量上げボタンとチャンネル上げボタンを 10秒間押して、ボタンのロックを解除します。
画像が小さすぎる	1 サイズの設定を調整します。リモコンのメニューを押し、サイズを選択します。2 お使いの外部機器の問題かもしれません。外部機器のマニュアルを参照してください。

OSD メッセージ

ワイド液晶モニタの使用中、以下のようなメッセージが表示されることがあります。

メッセージ	考えられる解決策
自動調整	何もする必要はありません。ワイド液晶モニタが自 動調整を行っています。
範囲外	最適な解像度の設定をチェックします。
	新しいビデオドライバのダウンロードが必要な場合 があります。詳細については、 support.jp.dell.com にアクセスしてください。
ビデオ入力なし	1 すべてのケーブルが正しく接続されていること をチェックします。
	2 入力の選択 メニューで、正しい入力源が選択されていることを確認します。詳細については、26 ページの「入力の選択 メニュー」を参照してください。
TV Button Lock	ロックを解除するには、リモコンの メニュー を押 し、 セットアップ を選択します。
	リモコンを使用できない場合は、ワイド液晶モニタ の側面にある音量上げボタンとチャンネル上げボタ ンを 10 秒間押して、ボタンのロックを解除します。
省電力モード キーボードのいずれかのキーを押すか、 マウスを動かします。	ワイド液晶モニタにコンピュータを接続していて、 信号が検出されない場合、ワイド液晶モニタはス リープモードに入ります。ワイド液晶モニタがス リープモードの状態にある場合、電源ライトは黄色 になります。
	キーボードのいずれかのキーを押すか、マウスを動かして、ワイド液晶モニタをオンにします。
省電力モード ビデオ信号を確認してください。	ビデオ外部機器を使用中、外部機器がアクティブでない状態が 30 分続くと、ワイド液晶モニタは省電力モードに入ります。ワイド液晶モニタが省電力モードの状態にある場合、電源ライトは黄色になります。
Self Test	コンピュータの入力源について、何も接続されていないときに表示されます。入力の選択 メニューの VGA または DVI を選択していますが、何も接続されていません。コンピュータを VGA または DVI に接続してください。

メッセージ	考えられる解決策
カードリーダにカードが挿入されていません。	カードを取り出し、挿入しなおします。
	カードリーダがサポートするカードを使用している ことを確認します。カードリーダでは、次の種類の カードがサポートされています。
	• コンパクトフラッシュ
	• SD メモリカード
	• メモリースティック
	• スマートメディア
	• マルチメディアカード

リモコンの問題

問題	考えられる解決策
リモコン使用時、 ワイド液晶モニタが応答しない	 1 リモコンをワイド液晶モニタの右下隅にまっすぐに向けます。 ワイド液晶モニタの前面をふさがないでください。リモコン 受光部の位置については、5ページの「前面」を参照してくだ さい。 2 電池が正しく挿入されていることを確認します。 3 電池が古い場合は、新しい電池に入れ替えます。 メモ:明るい光や他の赤外線外部機器が、リモコンおよびワイド
	液晶モニタのリモコン受光部と干渉することがあります。

カードリーダの問題

カードリーダは、jpeg ファイル形式と以下の種類のカードをサポートします。

- コンパクトフラッシュ
- SD メモリカード
- メモリースティック
- スマートメディア
- マルチメディアカード (MMC)

カードリーダに付属の取り付け説明書に従ってください。カードリーダを取り付けるときは、カー ドリーダの挿入時にカードリーダの前面にある矢印が上を向いていることを確認します。

カードリーダを取り付けたら、リモコンのメニューを押し、入力の選択を選択してカードリーダ を選択します。

ワイド液晶モニタをコンピュータに接続しているときの Self-Test 機能の使用

DVI または VGA コネクタを介してコンピュータをワイド液晶モニタに接続しているときは、selftest 機能を利用してワイド液晶モニタが正しく動作しているかどうかをチェックできます。ワイド 液晶モニタとコンピュータが正しく接続されているのに、ワイド液晶モニタの画面が暗いままの場 合は、以下の手順でワイド液晶モニタの self-test を実行します。

- 1 コンピュータとワイド液晶モニタの電源を切ります。
- 2 コンピュータの背面からビデオケーブルを外します。
- **3** ワイド液晶モニタの電源を入れます。

ワイド液晶モニタがビデオ信号を検知できず、かつ正常に動作している場合は、Dell - Self-Test Feature Check フローティングダイアログボックスが画面に表示されます(背景は黒)。

self-test モードの間、電源ライトは緑色のままで、self-test パターンが画面に連続して表示さ れます。システムが正常に動作している場合も、ビデオケーブルが外れたり損傷を受けたりす ると、このダイアログボックスが表示されます。

4 ワイド液晶モニタの電源を切り、ビデオケーブルを再接続してから、コンピュータとワイド液 晶モニタの電源を入れます。依然としてワイド液晶モニタの画面に何も表示されない場合は、 コンピュータかグラフィックカードに問題が発生している可能性があります。

詳細については、お使いのコンピュータのマニュアルを参照してください。

ワイド液晶モニタをモニタとして使用するときの問題

✓ メモ:VGA を使用しているワイド液晶モニタには、コンピュータだけが接続できます。

問題

画像が中心を外れている、 または小さすぎる

考えられる解決策

- 1自動調整を使用して、イメージング設定をチェックしま す。メニュー を押して OSD に入り、イメージング設定 を選択して 自動調整 を選択します。
- 2最適な解像度の設定をチェックします。 新しいビデオドライバのダウンロードが必要な場合があ

ります。詳細については、support.jp.dell.com にアクセ スしてください。

メモ: 古いビデオカードの中には、ワイド液晶モニタの解像 度の設定をサポートしていないものがあります。

問題	考えられる解決策
音が出ない	 1緑色のオーディオケーブルが、ワイド液晶モニタとコンピュータのオーディオコネクタに接続されていることを確認します。ワイド液晶モニタのコネクタの位置については、19ページの「VGAの使用」を参照してください。コンピュータのコネクタの位置については、お使いのコンピュータのマニュアルを参照してください。オーディオケーブルをヘッドフォンジャックに接続しないでください。 2コンピュータのボリュームがミュートになっていないことを確認します。 3スピーカをチェックして、コンピュータのサウンドが機能していることを確認します。コンピュータのトラブルシューティング情報については、お使いのコンピュータのマニュアルを参照してください。
	4 コンピュータからワイド液晶モニタを取り外し、ワイド 液晶モニタのボリュームが機能するかどうかをテストし ます。
PIP/POP/PBP が機能しない	1 OSD の設定が正しいことを確認します。メニュー を押して OSD に入り、PIP/POP/PBP を選択します。 2 ビデオおよびオーディオソースを取り換えます。
ビデオが表示されない	 メモ: self-test を表示している場合、ビデオカードに問題があるか、間違った入力源を使用しています。 1ワイド液晶モニタの電源が入っていることを確認します。 2電源ケーブルも含めて、すべてのケーブルがワイド液晶モニタに正しく接続されていることを確認します。 3ワイド液晶モニタの右下隅に、青色または黄色のライトが点灯しているかどうかチェックします。青色のライトは、ワイド液晶モニタの電源が入っていることを示します。黄色のライトは、ワイド液晶モニタが省電力モードにあることを示します。 4入力の選択メニューで、VGAが選択されていることを確認します。詳細については、26ページの「入力の選択メニュー」を参照してください。 5コンピュータを再接続します。 6正しく動作することがわかっている別の外部機器を接続します。 7出荷時の設定にリセットします。リモコンのメニューを押し、セットアップを選択して、出荷時設定にリセットを選択します。

ワイド液晶モニタの仕様

一般

型番 W2600 LCD ワイド液晶モニタ

ディスプレイタイプ TFT アクティブマトリックス (カラー TFT 液晶)

画面サイズ 26 インチ

566.4 x 339.8 mm (22.3 インチ x 13.38 インチ) 表示可能範囲

画像縦横比 ワイド画面

解像度 15:9

縦横比 16:9

480i ビデオ表示機能

480p

720p

1080i

576i (欧州)

576p (欧州)

その他の機能:

SAP 機能 あり CC 機能 なし

テレテキスト機能 あり (欧州のみ)

ペアレンタルコントロール機能 あり

外形寸法

830 x 504 x 209 mm ディスプレイ (スタンド含む)

830 x 421 x 107 mm ディスプレイ (スタンドなし)

スピーカ含む -、分離不可

重量 (スタンド含む) 約 19 kg / 41 ポンド

ネイティブ解像度 1280 x 768 (WXGA)

高密度ワイド液晶モニタ機能 あり

ピクチャーインピクチャー	
ピクチャーインピクチャー (PIP)	あり
ピクチャーアウトピクチャー (POP)	あり
ピクチャーバイピクチャー (PBP)	あり
チューナー数	2 (アナログ)
輝度(通常)	450 cd/m2 (通常)
コントラスト比	500:1 (通常)
応答時間(黒:白)	25 ミリ秒 (通常)
視野角度	
水平	+/- 85 度
垂直	+/- 85 度
入力	
ビデオ	
コンポジット (CVBS)	2 (側面および下面)
Sビデオ	2 (側面および下面)
コンポーネント	2 (下面)
ワイド液晶モニタ入力(同軸)	1 (下面)
オーディオ(RCA L+R)	7 組
DVI (コンピュータのモニタとしても使用可能)	l (下面)
D4	l (下面)
コンピュータ	
VGA (コンピュータモニタとして使用する場合)	1 (下面)
オーディオ(PC)	1 (下面)
その他	
カードリーダ	1 (側面)
出力	

1 (下面)

1 (側面)

1組

ヘッドフォン

コンポジット (CVBS)

オーディオ (RCA L+R)

ビデオ

オーディオ		
効果	SRS TruSurround XT	
	ナイトモード	
スピーカ(内蔵)	15 W/ チャンネル	
	合計 30 W	

索引

D	V	<
DVI-HDCP, 18	VGA, 19	クリーニング,11
1	あ	け
IR レシーバー,5	アンテナ,15	ケーブル,9
	アンテナの接続,15	ケーブルの接続
0		同軸 , 15
OSD, 22, 25 PBP, 28 PIP, 28 POP, 28 オーディオ, 28 カードリーダ, 30 外観, 30 言語, 26 使用, 25 スリープタイマー, 29 設定, 30 入力の選択, 26 ピクチャ, 27 メインメニュー, 25 メッセージ, 38 リモコン, 25 S S ビデオ, 16 Self Test, 40 SRS, 28	お オーディオ,28 効果,28 ステレオ,28 オンスクリーンディスプレイ ,25 か カードリーダ サポートされるカード,30 カードリーダー,7 外部機器の接続 DVDプレーヤ,13 衛星放送受信機,13 ケーブルテレビチューナー,13 ビデオデッキ,13 概要 側面のコネクタ,5 側面パネルのボタン,5 ワイド液晶モニタ,5	こ コネクタ,7 AV1,7 AV2,7,8 AV4,8 AV5,8 AV6,8 DVI,18 DVI HDCP,13 DVI-HDCP,8,18 S ビデオ,13,16 VGA,19 位置,8 コンポーネント,8,13,17 コンポジット,13,15 側面パネル,7 電源,8 同軸,8,13 品質,13 コンポーネント,17

し トラブルシューティング,33 ほ OSD, 38 ボタン 出荷時設定 self test, 40 OSD, 6 復元,30 一般的な問題,34 PIP, 22 仕様,43 コンピュータ,40 決定,22 モニタ,40 前後のチャンネルへの移動,6 リモコン,39 側面パネル,6 す チャンネル,22 スリープタイマー,29 電源,6 な 入力の選択,6 ナイトモード,28 ボリューム, 6, 22 せ リモコン,22 ロック,30 設定,30 ロック解除,30 に 入力の選択,22 ち 名前変更,30 も 入力源,26 チャンネル,30 モニタ,19 調整,28 問題 輝度,27 は リモコン,39 色,27 ワイド液晶モニタ,33 背面カバー 取り外し,18,19 て 汎用リモコン,24 IJ 電源インジケータ リモコン,25 青ライト,5 使用,21 ひ 黄ライト,5 電池,21 ピクチャーアウトピクチャー 電源ライト 汎用リモコン,24 , 28 青,5 ボタン,22 黄,5 ピクチャーインピクチャー,28 問題,39 ピクチャーバイピクチャー,28 ح ゎ 同梱品,9 ワイド液晶モニタ 同軸,15 コネクタ,13 ヘッドフォン,7 セットアップ,13 場所,13

Dell™ Wide LCD Monitor (With TV Functionality) Owner's Manual

Model W2600

Notes, Notices, and Cautions

NOTE: A NOTE indicates important information that helps you make better use of your wide LCD monitor.

NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice. © 2004 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo; SRS(O) TruSurround XT, SRS, and (o) symbol are trademarks of SRS Labs, Inc.;

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Rev. A00 August 2004

Contents

1	About Your Wide LCD Monitor		
	Front View.	53	
	Right Side View	54	
	Left Side View	55	
	Bottom View	56	
	Package Contents	57	
	Caring for Your Wide LCD Monitor	59	
2	Setting Up Your Wide LCD Monitor		
	Proper Location for Your Wide LCD Monitor	61	
	Connecting Your Wide LCD Monitor	61	
3	Your Remote Control		
	Installing Batteries	69	
	Using Your Remote Control	70	
	Using Your Wide LCD Monitor With a Universal or Learning Remote Control	72	
4	Using the On-Screen Display		
	Using Your Remote Control With the OSD	73	
	Selecting Your OSD Language	74	
	Input Select Menu	74	
	Picture Menu	75	
	Audio	76	
	PIP/POP/PBP	76	

	Channel Setup	77
	Sleep Timer	77
	OSD Setup	78
	Card Reader	78
5	Troubleshooting Your Wide LCD Monitor	
	Troubleshooting Tips.	81
	General Problems	82
	OSD Messages	86
	Remote Control Problems	87
	Problems With the Card Reader	87
	Using the Self-Test Feature When Your Wide LCD Monitor is Connected to Your Computer	88
	Problems When Using the Wide LCD Monitor as a Monitor	88
6	Specifications for Your Wide LCD Monitor	
امرا	lov	0.5

About Your Wide LCD Monitor


Front View



IR receiver


- Senses the signal from the remote control
- Power indicator light (LED)
- The light is blue when the wide LCD monitor is on and amber when the wide LCD monitor is in power save mode

Right Side View

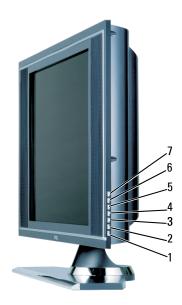


1	Power button	Push to turn the wide LCD monitor on and off
2	OSD menu button	Push to enable the on-screen display (OSD)
3	Volume button	Push to decrease the volume or navigate through the on-screen display (OSD)
4	Volume button	Push to increase the volume or navigate through the OSD
5	Channel button	Push to select the previous channel or navigate through the OSD
6	Channel button	Push to select the next channel or navigate through the OSD
7	Input Source button	Push to display the Input Select menu

Left Side View

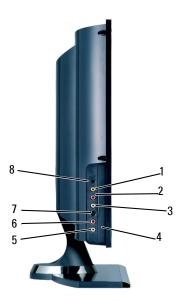

1	Composite video connector (AV1)	Use the side composite connector for devices you connect occasionally such as a video game system
2	R (composite right audio connector)	Use the audio connector if you have connected a device to composite connector (AV1)
3	L (composite left audio connector)	Use the audio connector if you have connected a device to composite connector (AV1)
4	Card reader panel	Remove this panel if you are installing a card reader
5	L (S-Video left audio connector)	Use the audio connector if you have connected a device to the S-Video connector (AV3)
6	R (S-Video right audio connector)	Use the audio connector if you have connected a device to S-Video connector (AV3)
7	S-Video connector (AV3)	Use the side S-Video connectors for devices that you connect occasionally, such as a camcorder
8	Headphone connector	Connect headphones

Bottom View

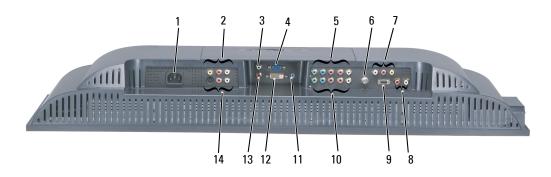

1	Power connector	Connect your power cord.
2	Composite video and audio connector (AV2)	Connect devices such as a VCR or DVD player.
3	DVI audio connector (L)	Use the DVI audio connector if you have connected a device to the DVI connector.
4	VGA connector	Use the VGA connector to use your wide LCD monitor as a monitor for your computer.
5	Component audio and video connectors (AV6)	Connect devices such as a DVD player, satellite or cable box.
6	ANT/Cable	Connect an antenna or cable box.
7	Composite Audio/Video Out connector	Connect a device such as a VCR if you have connected an antenna or cable through the ANT/Cable connector.
8	D4 audio connector	Use the D4 audio connector if your have connected a device to the D4 connector.
9	D4 connector	Connect device such as a DVD player.
10	Component audio and video connector (AV5)	Connect devices such as a DVD player, satellite or cable box.
11	Audio connector for your computer	Connect the audio cable from your computer to the wide LCD monitor.
12	DVI connector	Connect devices such as a DVD player, set-top box, or your computer.
13	DVI audio connector (R)	Use the DVI audio connector if you have connected a device to the DVI connector.
14	S-Video connector (AV4)	Connect devices such as a video game system or a DVD player.

Package Contents



NOTE: Component cables are not included with the wide LCD monitor . If you need additional cables, contact Dell.

Remote Control



AAA batteries (2)



Power Cable



S-Video cable



Audio cable (2)



Composite cable



DVI cable



PC Audio cable



VGA cable



Documentation





Caring for Your Wide LCD Monitor



CAUTION: Only a licensed technician should service the wide LCD monitor . Do not disassemble the wide LCD monitor.



NOTE: Before cleaning the wide LCD monitor , unplug it from the electrical outlet.

- To clean the surface of the panel, lightly dampen a soft, clean, lint-free cloth with water.
- To clean the wide LCD monitor cabinet, use a cloth lightly dampened with a mild detergent.
- Do not use chemicals such as benzene, thinner, ammonia, or any type of abrasive cleaner.
- Do not use compressed air to clean the wide LCD monitor .

Setting Up Your Wide LCD Monitor

CAUTION: Before you begin any of the procedures in this section, follow the safety instructions located in the Product Information Guide.

Proper Location for Your Wide LCD Monitor

Consider the following environmental factors when you are deciding where to put your wide LCD monitor:

- Do not store or use the wide LCD monitor in locations that are exposed to high heat, direct sunlight, or extreme cold.
- Avoid moving the wide LCD monitor between locations with extreme temperature differences. For more information, see Specifications.
- Do not subject the wide LCD monitor to severe vibration or high impact conditions. Do not place the wide LCD monitor inside a car trunk.
- Do not store or use the wide LCD monitor in locations where the wide LCD monitor would be exposed to high humidity or dusty environment.
- Do not place the wide LCD monitor in a location where water or other liquids could spill on or into the wide LCD monitor.


Connecting Your Wide LCD Monitor

Your wide LCD monitor has four types of standard connectors.

Quality	Cable and Connector	When to Use
Good		Coaxial (RF) carries the video and audio through a single cable. The coaxial connector is labeled ANT/Cable on your wide LCD monitor . To locate the connector, see "Bottom View" on page 56.

Quality **Cable and Connector** When to Use Good Composite carries the video signal through a single cable. If you are using a composite video connector, you also need to connect composite audio cables. To locate the connector, see "Left Side View" on page 55 and "Bottom View" on page 56. all: Better S-Video splits the video signal into two signals, black-and-white and color. If you are using an S-Video connector, you also need to connect the AV cables for audio. To locate the connectors, see "Left Side View" on page 55 and "Bottom View" on page 56." Best Component splits the video signal into three signals, two color and one black-and-white. Ensure that you connect all five cables. To locate the connector, see "Bottom View" on page 56.

Using the ANT/Cable (Coaxial) Connector

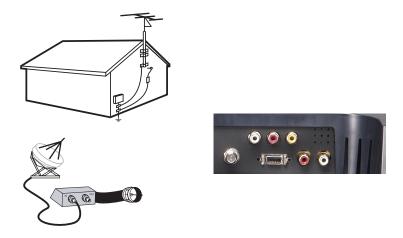

- 1 Turn off the wide LCD monitor and unplug the power cord.
- **2** Connect the coaxial cable to the ANT/Cable connector of the wide LCD monitor .
- 3 Plug in the power cord for the wide LCD monitor and turn on the wide LCD monitor.
- **4** Enter the on-screen display (OSD) and select **TV**. See "Input Select Menu" on page 74.

Using the Composite Video Connector



1 Turn off the wide LCD monitor and unplug the power cord.



NOTE: If you are connecting a device that you want to be able to remove, such as a camcorder, use the composite video connector on the side of the wide LCD monitor .

- **2** Connect your device including the audio cables.
- **3** Plug in the power cords for the wide LCD monitor and devices and turn them on.
- 4 Enter the OSD and select the proper composite input. See "Input Select Menu" on page 74.

Using the S-Video Connector



- 1 Turn off the wide LCD monitor and unplug the power cord.
- **NOTE**: If you are connecting a device that you want to be able to remove, such as a camcorder, use the S-Video connector on the side of the wide LCD monitor.
 - **2** Connect your device including the audio cables.
 - **3** Plug in the power cords for the wide LCD monitor and devices and turn them on.
 - **4** Enter the OSD and select the proper S-Video input. See "Input Select Menu" on page 74.

Using Component Connectors



- 1 Turn off the wide LCD monitor and unplug the power cord.
- **2** Connect your device including the audio cables.
- 3 Plug in the power cords for the wide LCD monitor and devices and turn them on.
- **4** Enter the OSD and select the proper component input. See "Input Select Menu" on page 74.

Using the D4 Connector



- 1 Turn off the wide LCD monitor and unplug the power cord.
- **2** Connect your device including the audio cables.
- 3 Plug in the power cords for the wide LCD monitor and devices and turn them on.
- **4** Enter the OSD and select the proper composite input. See "Input Select Menu" on page 74.
- **NOTE**: Only one connector can be used for a computer, either VGA or DVI.

Using the DVI Connector



NOTE: Only one connector can be used for a computer, either VGA or DVI.

- 1 Turn off the wide LCD monitor and unplug the power cord.
- 2 Remove the back cover from the wide LCD monitor by pulling the cover toward you and lifting it away.



- **3** Connect the white DVI cables and the audio cables. If you are connecting a video device, use the audio connectors (red and white) or if you are connecting a computer use the stereo connector (green).
- NOTE: Some cable boxes may have DVI connectors, but do not support using a DVI connection. For more information, contact your cable wide LCD monitor company.





- Replace the back cover.
- **5** Plug in the power cords for the wide LCD monitor and devices and turn them on.
- Enter the OSD and select DVI. See "Input Select Menu" on page 74.


Using VGA (PC Analog).

You can use your wide LCD monitor as a computer monitor using a VGA connector

- **NOTE:** Only one connector can be used for a computer, either VGA or DVI.
- 1 Turn off the wide LCD monitor and unplug the power cord.
- 2 Remove the back cover from the wide LCD monitor by pulling the cover toward you and lifting it away.



3 Connect the blue VGA cable to your wide LCD monitor and to your computer.

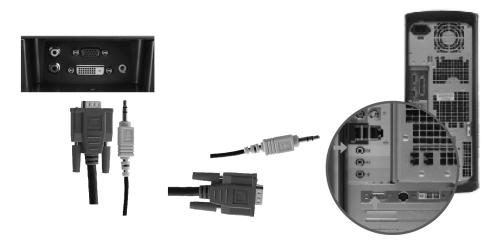

- 4 Connect the green audio cable to the connector on the wide LCD monitor and to your computer.
- **5** Replace the back cover.
- 6 Plug in the power cords for the wide LCD monitor and devices and turn them on.
- 7 Enter the OSD and select the VGA. See "Input Select Menu" on page 74.

Your Remote Control


Installing Batteries

Before you can use your remote control, install two-AAA batteries.

- 1 Open the battery cover.
- 2 Install the batteries. Make sure that you match the + and on the batteries with the + and symbols in the battery compartment.
- **3** Close the battery cover.



Using Your Remote Control

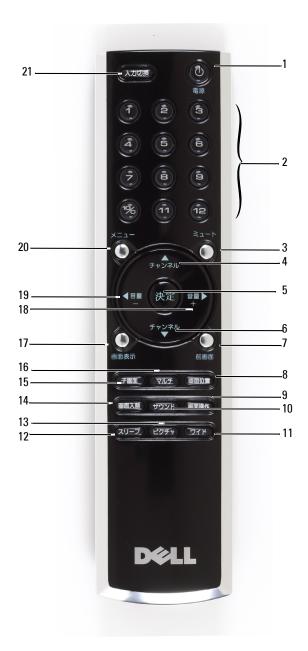

1	Power Button	Turns the wide LCD monitor on and off
2	Number buttons	Press to select a channel
3	Mute	Press to turn off the sound. Press again to turn on the sound
4	CH (up icon)	Push to view the next channel
		In the OSD, use the channel button to navigate through the menus in the on-screen display (OSD)
5	Enter	Select an OSD option, confirms a channel selection, selects an image when in card reader mode
6	CH (down icon)	Push to view the previous channel
		In the OSD, use the channel button to navigate through the menus in the on-screen display (OSD)
7	Last	Returns you to the previously viewed channel
8	Pos	Changes the position of the Picture-In-Picture (PIP) window
9	PIP Sel	Toggles between windows when you use Picture-In-Picture (PIP), Picture-Outside-Picture (POP), or Picture-By-Picture (PBP)
10	Audio	Cycles through the preset Audio options
11	Size	Cycles through the size options from the Size menu
12	Sleep	Turns on the sleep timer
13	Pict	Cycles through the preset options for the Picture menu
14	Swap	Swaps images when using PIP, POP, or PBP
15	PIP	Enters and exits PIP mode
16	POP PBP	Enters and exits POP or PBP mode
17	Disp	Displays information about your wide LCD monitor (for example, in TV Mode displays the channel you are watching)
18	Vol +	Increases the volume
		In the OSD, use the volume button to navigate through the menus.
19	Vol -	Decreases the volume
		In the OSD, use the volume button to navigate through the menus.
20	Menu	Enters and exits the OSD main menu
21	Input	Enters and exits the Input Select menu

Using Your Wide LCD Monitor With a Universal or Learning Remote Control

Preprogrammed universal remote controls can be programmed to control the following functions on your Dell wide LCD monitor:

- Power
- Channel Up (+)
- Channel Down (-)
- Volume Up (+)
- Volume Down (-)
- Mute
- Input Select
- **NOTE:** Future preprogrammed universal remote controls may be able to control more functions.

You can program universal remote controls to work with your Dell wide LCD monitor in the following ways:

- If the remote control has a search function, this function may be used to find the correct code.
- If the remote control has a learning function, you can program specific buttons on it from the Dell remote control, in addition to those buttons listed above.
- **NOTE:** See the remote control documentation for specific instructions for your universal remote control.

Using the On-Screen Display

Your wide LCD monitor has an on-screen display (OSD) that allows you to select the proper input source, make adjustments to the image and audio settings, select to view Picture-In-Picture, Picture-Outside-Picture, and Picture-By-Picture. The OSD also allows you to chose how to view the images when using the card reader and to make adjustments to the image if you are using the wide LCD monitor as your computer monitor.

Using Your Remote Control With the OSD

- **NOTE**: You can access and make selections to the OSD using the volume and channel buttons on the side panel of the wide LCD monitor or the remote control. Except where noted, this section describes how to use the OSD with the remote control.
- **1** To enter the OSD, press the **Menu** button. Eight icons appear along the bottom of the screen.



- **2** Use the left and right buttons (volume buttons) to move between the icons. The icon appears highlighted as you move through the menu.
- **3** To select an option, push the Enter button when the icon is highlighted.
- In the option menu, use the up and down (channel) buttons to move through the various settings.
- **NOTE:** A red arrow appears next to the setting as you navigate through the options. A check mark appears next to the option that is selected.
- **5** Use the up and down buttons (channel buttons) and the **Enter** button to adjust or select settings.
- **NOTE:** You can select **Exit** to return to the main menu or press **Menu** to exit the OSD.


- 6 After you have made your selections, select the Exit.
- 7 To exit the OSD, press Menu on the remote or select Exit from the main menu.

Selecting Your OSD Language

- 1 Press Menu to enter the OSD.
- 2 Select Setup.
- 3 In the Setup menu, select Language and select the language that you want the OSD to appear in.

Input Select Menu

The Input Select menu allows you to select the proper source based on how you have your wide LCD monitor and video equipment connected. Press Input on the remote to go directly to the Input Select menu. You can also press Menu and select Input Select from the main menu.

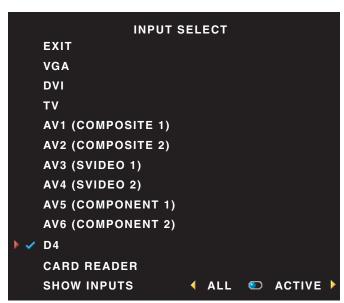

NOTE: Show Inputs allows you to select Active or All. Active searches for which connectors are being used. The available input sources appear in white and input sources that are not available appear in grey. All shows all the input sources and allows you to select all the input sources even if you do not have a device connected.

VGA — Select when your wide LCD monitor is being used as a computer monitor and you have connected the computer using a VGA cable. See "Bottom View" on page 56 for the location of the VGA connector.

DVI — Select when you have a device, such as a set-top box, connected to the DVI connector. See "Bottom View" on page 56 for the location of the DVI connector.

TV — Select when you have your antenna or cable connected to the ANT/Cable connector. See "Bottom View" on page 56 for the location of the ANT/Cable connector.

AV1 — Select when you have a video device, such as a video game system, connected to the composite connector on the side of the wide LCD monitor . See "Left Side View" on page 55 for the location of the composite connector.

AV2 — Select when you have a video device, such as a DVD player, connected to the composite connector on the back of the wide LCD monitor. See "Bottom View" on page 56 for the location of the composite

AV3 — Select when you have a video device, such as a VCR, connected to the S-Video connector on the side of the wide LCD monitor. See "Left Side View" on page 55 for the location of the S-Video connector.

AV4 — Select when you have a video device, such as a DVD player, connected to the S-Video connector on the back of the wide LCD monitor. See "Bottom View" on page 56 for the location of the S-Video connector.

AV5 — Select when you have a video device, such as a satellite receiver, connected to the component connector. See "Bottom View" on page 56 for the location of the component connector.


AV6 — Select when you have a video device, such as a DVD player, connected to the component connector. See "Bottom View" on page 56 for the location of the component connector.

D4 — Select when you have a video device, such as a DVD player, connected to the D4 connector on the back of the wide LCD monitor. See "Bottom View" on page 56 for the location of the D4 connector.



NOTE: In OSD Settings, located in the Setup menu, you can set the Input Select to display the device that you have attached. For example, AV2 would say DVD when you view the Input Select menu.

Picture Menu

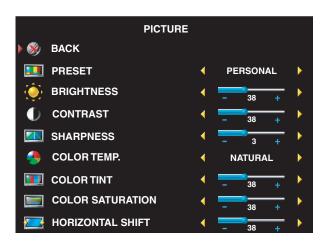

If you select one of the following preset image settings, the individual settings are automatically updated to provide the best picture for the selected content:

- Movies
- Sports
- Weak Signal
- Multimedia

If you select **Personal**, you can adjust the individual settings, such as Brightness and Color.

The color temperature presets are:

Natural: the native panel temperature

Normal: 6500K Blue: 9300K Red: 5700K

Audio



Midnight Mode — Evens out the large volume variations between voice and action scenes.

SRS TruSurround XT— Delivers virtual surround sound over two speakers from any source, which creates a wider sound with deep rich bass.


If you select one of the following preset **Equalizer Mode** settings, the individual audio levels are automatically updated:

- Music
- Theater
- Voice

If you select **Personal**, you can adjust the individual audio levels, such as **Bass** and **Treble**. Use **Audio Program** to select **Stereo**, **Mono**, or **SAP** (Second Audio Program).

PIP/POP/PBP

You can view multiple active sources simultaneously using Picture-In-Picture (PIP), Picture-Outside-Picture (POP), or Picture-By-Picture (PBP).

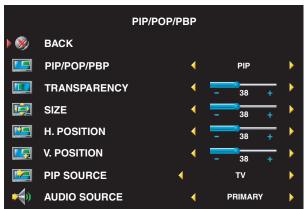

NOTE: You can use the PIP button or the POP/PBP button on the remote control to turn on and off PIP, POP, and PBP.

If you are in PIP, POP, or PBP mode, use the SWAP button on the remote control to switch primary and secondary sources Use PIP Sel button on the remote control to switch control between windows.

In the OSD, you can adjust the Transparency, the Size, and H (horizontal) and V (vertical) Position of the PIP windows. When you are selecting

the horizontal orientation, - moves the window left and + moves the window to the right. When you are adjusting the vertical orientation, 100 is at the top of the screen and 0 is at the bottom of the screen.

For POP, you can select from three different POP options:

- **POP1** one window
- POP3 three windows
- POP12 twelve windows

POP Scan Mode allows you to select Sequential or Float. Sequential mode plays the source for selected channels that appear in the windows. Float rotates through each window and plays all of the preselected channels. The rotation runs through all the available channels before it starts again at the lowest channel.

Channel Setup




To program a remote control key number and the display for a specific channel, use xxx in Channel Setup.

Sleep Timer

Sleep Timer allows you to select an increment of time after which the wide LCD monitor turns off automatically. You can select from 10 minutes to 3 hours.

OSD Setup

OSD setup allows you to adjust the appearance of the OSD, set the channels when in wide LCD monitor mode, change the language of the OSD (see "Selecting Your OSD Language" on page 74), and restore factory settings.

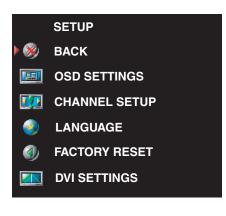

Use OSD Hold Time to increase or decrease the amount of time the OSD appears. The maximum amount of time is 60 seconds.

In the OSD Setup menu, you can select TV Button Lock to lock the buttons on the side panel. When this option is enabled, only the power button functions. Hold the volume increase and the channel increase buttons together for 10 seconds to unlock the buttons.

To program a remote control key number for a specific channel and select the number that displays on the screen, select Channel Assignment from the Channel Setup menu.


If you are using the DVI connector, you may need to verify the following settings:

Source — The default setting is Auto. The wide LCD monitor automatically detects if a computer (PC) or video device is being used. If the image does not display correctly, you can select the source, PC or Video, depending on the device you are using.

Color — The default color space is RGB. If the colors are not displaying correctly, you can change the setting to YUV.


Card Reader

A card reader allows you to view digital photos on your wide LCD monitor .

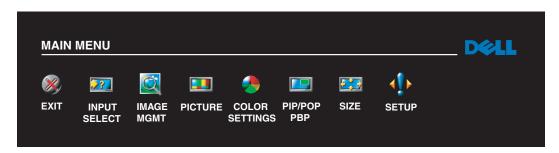

Your card reader supports the following card types:

- Compact Flash
- Secure Digital
- Memory Stick
- Smart Media
- Multimedia Card (MMC)
- **NOTE:** To purchase a card reader, contact Dell.

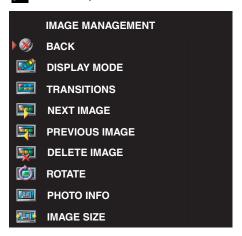

The Image Management menu allows you select how to display your photos, including viewing the photos as a slide show, rotating photos, selecting different transitions between photos, and displaying photo information, such as date and time the photo was taken.

Troubleshooting Your Wide LCD Monitor



CAUTION: If at any time you see smoke or sparks coming from your wide LCD monitor , unplug the wide LCD monitor immediately and contact Dell. Do not try to perform any troubleshooting steps.

Troubleshooting Tips



NOTE: Some problems may be related to devices you have connected to your wide LCD monitor. For additional troubleshooting help, see the documentation for any devices connected to your wide LCD monitor.

Most problems with your wide LCD monitor may be caused by not having the correct input source selected. Each connector on the wide LCD monitor (side and bottom) is associated with an input source, which are labeled AV1 through AV6 in the Input Select menu.

- AVI Composite connector on the side of the wide LCD monitor
- AV2 Composite connector on the bottom of the wide LCD monitor
- AV3 S-Video connector on the side of the wide LCD monitor
- AV4 S-Video connector on the bottom of the wide LCD monitor
- AV5 Component connector on the bottom of the wide LCD monitor
- AV6 Component connector on the bottom of the wide LCD monitor

You can also select the following input sources:

- TV ANT/Cable connector on the bottom of the wide LCD monitor
- VGA VGA connector on the bottom of the wide LCD monitor
- DVI DVI connector on the bottom of the wide LCD monitor
- D4 D4 connector on the bottom of the wide LCD monitor

General Problems

Problem Possible Solution

Poor picture quality while watching wide LCD monitor and using a device such as a DVD player or a VCR

- 1 Check the aspect ratio settings in the OSD. Press the Menu button on the remote control and select Size. For more information on using the OSD, see "Using the On-Screen Display" on page 73.
- 2 Reconnect the device using the same type of connector. For example, if you are using the composite connector on the bottom, try connecting the device to the composite connector on the side of the wide LCD monitor. See "About Your Wide LCD Monitor" on page 53 for the location of the connectors.

 After you connect the device, change the input source in the OSD. See "Input Select Menu" on page 74 for more information.
- 3 Connect the device using a different connector. For example, if you are experiencing the problem using a composite connector, try using the component connector.

NOTE: To connect to a different connector, you need the appropriate cables for that connector. See your device documentation for a list of supported connections.

After you connect the device, change the input source in the OSD. See "Input Select Menu" on page 74 for more information.

- 4 Reset the original factory defaults. Press Menu on the remote control, select Setup, and then select Factory Reset
- **5** Adjust the color temperature. Press **Menu** on the remote control, select **Picture**, and then select **Color Temperature**.

NOTE: Some set top boxes offer aspect ratio. See your device documentation for more information.

Problem	Possible Solution
Poor picture quality when using a device connected to the ANT/Cable (coaxial) connector	1 Ensure wide LCD monitor is selected as the input source in the Input Select menu. See "Input Select Menu" on page 74 for more information.
	2 Press Menu on the remote control, select Setup , and then select Channel Setup . This resets the channels.
	3 Check the aspect ratio settings in the OSD. Press the Menu button on the remote control and select Size. For more information on using the OSD, see "Using the On-Screen Display" on page 73.
	4 Reset the original factory defaults. Press Menu on the remote control, select Setup, and then select Factory Reset.
	5 Adjust the color temperature. Press Menu on the remote control, select Picture , and then select Color Temperature .
	6 The problem may be with your device, contact your service provider.
Nothing appears on my wide LCD monitor	1 Ensure the wide LCD monitor is turned on.
	2 Verify that all the cables are properly connected to the wide LCD monitor , including the power cable.
	3 Check to see if there is a blue or amber light on the lower, right-hand corner of the wide LCD monitor . A blue light indicates the wide LCD monitor is on. An amber light, means the wide LCD monitor is in power save mode.
	4 Ensure the proper source is selected in the Input Select menu. See "Input Select Menu" on page 74 for more information.
	5 Reconnect any devices that are currently connected to the wide LCD monitor. If you are using multiple devices, connect and test one device at a time.
	6 Connect another device that you know is working properly.
	7 Reset the original factory defaults. Press Menu on the remote control, select Setup, and then select Factory Reset.

Problem	Possible Solution
No sound	1 Ensure mute is not turned on. Pressing the Mute button on the remote control turns the mute function on and off.
	2 If only certain wide LCD monitor channels do not have sound, verify that the proper source is selected in the Input Select menu. (For more information, see "Input Select Menu" on page 74).
	3 Verify that the audio cables are firmly connected to both the audio input connectors on your wide LCD monitor and audio output connectors on your devices. Ensure that the cable colors match the connectors colors.
	4 Also, ensure that the audio cables are connected to the same row as the video cables. See "About Your Wide LCD Monitor" on page 53 for the location of the connectors.
	5 Reconnect the device using the same type of connector. For example, if you are using the composite connector on the bottom, try connecting the device to the composite connector on the side of the wide LCD monitor. See "About Your Wide LCD Monitor" on page 53 for the location of the connectors.
	After you connect the device, change the input source in the OSD. See "Input Select Menu" on page 74 for more information.
	6 Connect the device using a different connector. For example, if you are experiencing the problem using a composite connector, try using the component connector.
	NOTE: To connect to a different connector, you need the
	appropriate cables for that connector. See your device
	documentation for a list of supported connections.
	After you connect the device, change the input source in the OSD. See "Input Select Menu" on page 74 for more information.
	7 Test the device on a different wide LCD monitor.
	NOTE: If you are using PIP/POP/PBP, ensure the proper Audio Source is selected. Press Menu on your remote control, and select PIP/POP/PBP .

Problem	Possible Solution
Double image or no image with DVD	Turn off the progressive scan on the DVD player. Your Dell™ wide LCD monitor offers built-in deinterlacer that is equal to or better quality than the deinterlacer on your DVD player. For more information about progressive scan on your DVD player, see the documentation for your DVD player
Picture is too dim or too bright	Update the color settings in the OSD. Press Menu on the remote control and select Picture .
The screen is not centered correctly	1 Update the size settings in the OSD. Press Menu on the remote control and select Size.
	2 Reset the original factory defaults. Press Menu on the remote control, select Setup, and then select Factory Reset.
Screen has one or more lines	1 Check the aspect ratio settings in the OSD. Press the Menu button on the remote control and select Size. For more information on using the OSD, see "Using the On-Screen Display" on page 73.
	2 Ensure the proper source is selected in the Input Select menu. See "Input Select Menu" on page 74 for more information.
	3 Try connecting a different device. Ensure that you properly connect the cables and update the input source in the OSD.
	4 Update the size settings in the OSD. Press Menu on the remote control and select Size .
	5 Reset the original factory defaults. Press Menu on the remote control, select Setup , and then select Factory Reset .
The side panel buttons do not work	Check the OSD to see if the buttons have been locked. Press Menu on your remote control, select Setup.
	If you are unable to use the remote control, press the volume up and the channel up buttons on the side of the wide LCD monitor for 10 seconds to unlock the buttons.
The picture is too small	 Adjust the size settings. Press Menu on the remote control, and select Size. This may be a problem with your device. See the
	documentation for the device.

OSD Messages

While using your wide LCD monitor, the following messages may appear.

Message	Possible Solution
Auto Adjust	No action required, the wide LCD monitor is performing an auto adjustment.
Out of Range	Check the optimal resolution settings.
	You may need to download a new video driver. For more information, go to support.dell.com.
No Video Input	1 Check all cables are properly connected.
	2 Ensure the proper source is selected in the Input Select menu. See "Input Select Menu" on page 74 for more information.
TV Button Lock	To unlock, press \mathbf{Menu} on your remote control, select \mathbf{Setup} .
	If you are unable to use the remote control, press the volume up and the channel up buttons on the side of the wide LCD monitor for 10 seconds to unlock the buttons.
In Power Save Mode Press any key on keyboard or move mouse	If you have a computer connected to the wide LCD monitor and there is no signal detected, the wide LCD monitor goes in to sleep mode. The power light is amber when the wide LCD monitor in is sleep mode.
	Press any key on the keyboard or move the mouse to wake the wide LCD monitor .
In Power Save Mode Please Check Video Signal	If you are using a video device and it has been inactive for 30 minutes the wide LCD monitor goes in to power save mode. The power light is amber when the wide LCD monitor is in power save mode.
Self Test	Appears for computer source when there is nothing plugged in. Select VGA or DVI from Input Select menu and nothing is plugged in. Plug a computer in to the VGA or DVI.

Message	Possible Solution
No Card Detected in Card Reader	Remove and reinstall the card.
	Ensure you are using a card that is supported by the card reader. Your card reader supports the following card types:
	Compact Flash
	Secure Digital
	 Memory stick
	Smart Media
	Multimedia card

Remote Control Problems

Problem	Possible Solution
The wide LCD monitor does not respond when using the remote control	 Point the remote control directly at the lower right corner of the wide LCD monitor. Be sure that nothing is blocking the front of the wide LCD monitor. For the location of the IR, see "Front View" on page 53. Verify that the batteries are properly installed. If the batteries are old, install new batteries. NOTE: Bright lights or other infrared devices may interfere with your remote control and IR on the wide LCD monitor.

Problems With the Card Reader

Your card reader supports jpeg file formats and the following card types:

- Compact Flash
- Secure Digital
- Memory Stick
- Smart Media
- Multimedia Card (MMC)

Follow the installation instructions that came with your card reader. When you install the card reader, locate the arrow on the front of the card reader and ensure that the arrow is pointing up when you slide the card reader in to place.

When the card reader is installed, press Menu on the remote control, select Input Source, and then select Card Reader.

Using the Self-Test Feature When Your Wide LCD Monitor is **Connected to Your Computer**

When your computer is connected to the wide LCD monitor through DVI or VGA connector you can use the self-test feature to check whether your wide LCD monitor is functioning properly. If your wide LCD monitor and computer are properly connected but the wide LCD monitor screen remains dark, run the wide LCD monitor self-test by performing the following steps:

- 1 Turn off both your computer and the wide LCD monitor.
- Unplug the video cable from the back of the computer.
- **3** Turn on the wide LCD monitor.

If the wide LCD monitor cannot sense a video signal and is working correctly, the floating "Dell - Self-Test Feature Check" dialog box appears on the screen (against a black background).

While in self-test mode, the power light remains green and the self-test pattern scrolls through the screen continually. This box also appears during normal system operation if the video cable becomes disconnected or damaged.

4 Turn off your wide LCD monitor and reconnect the video cable; then turn on both your computer and the wide LCD monitor. If your wide LCD monitor screen remains blank, the problem may be with your computer or graphic card.

See your computer documentation for more information.

Problems When Using the Wide LCD Monitor as a Monitor



NOTE: You can only connect your computer to the wide LCD monitor using a VGA connector.

Problem	Possible Solution
The picture is off-centered or too small	 Use Auto Adjust to check the Image Settings. Press Menu to enter the OSD, select Image Settings, and then select Auto Adjust. Check the optimal resolution settings.
	You may need to download a new video driver. For more information, go to support.dell.com.
	NOTE: Some older video cards may not support the resolution settings for the wide LCD monitor .

Problem	Possible Solution
No audio	1 Ensure the green audio cable is connected to audio connector on the wide LCD monitor and on the computer. For the location of the connector on the wide LCD monitor see, "Using VGA (PC Analog)." on page 67." See your computer documentation for the location of connectors on your computer.
	Do not connect the audio cable to the headphone jack.
	2 Ensure the volume on the computer is not muted.
	 3 Verify that sound on your computer is working by checking the speakers. See your computer documentation for information on troubleshooting your computer. 4 Disconnect the wide LCD monitor from the computer and test to see if the wide LCD monitor volume works.
PIP/POP/PBP not working	1 Ensure the settings in the OSD are properly set. Press Menu to enter the OSD, and select PIP/POP/PBP.
	2 Swap the video and audio source.
No video	 NOTE: If you see a self-test, it means there is a problem with your video card or you are using the wrong input source. 1 Ensure the wide LCD monitor is turned on. 2 Verify that all the cables are properly connected to the wide LCD monitor, including the power cable.
	3 Check to see if there is a blue or amber light on the lower, right-hand corner of the wide LCD monitor. A blue light indicates the wide LCD monitor is on. An amber light, means the wide LCD monitor is in power save mode.
	4 Ensure VGA is selected in the Input Select menu. See "Input Select Menu" on page 74 for more information.
	5 Reconnect the computer.
	6 Connect another device that you know is working properly.
	7 Reset the original factory defaults. Press Menu on the remote control, select Setup, and then select Factory Reset.

Specifications for Your Wide LCD Monitor

Model number	W2600 LCD wide LCD monitor

Display type TFT Active Matrix (Color TFT LCD)

Screen size 26 inches

Viewable area 566.4 x 339.8 mm (22.3 inches x 13.38 inches)

Image aspect ratio Wide screen

15:9 resolution16:9 aspect ratio

Video Display Capabilities 480i

480p 720p 1080i

Yes

576i (Europe) 576p (Europe)

Additional Features:

General

SAP capable Yes
CC capable Yes

Teletext capable
Parental control capable
Yes (Europe only)

Physical Dimension

Display (with stand)	830 x 504 x 209 mm
Display (no stand)	830 x 421 x 107 mm
With Speakers	N/A, non-detachable
Weight (with stand)	19 kg/41 lbs (est)
Native Resolution	1280x768 (WXGA)

HD wide LCD monitor Capable Yes

Picture-In-Picture	
Picture-In-Picture (PIP)	Yes
Picture-Outside-Picture (POP)	Yes
Picture-By-Picture (PBP)	Yes
Number of Tuners	2 analog
Brightness (typical)	450 nits (typical)
Contrast Ratio	500:1 (typical)
Response time (black:white)	25 ms (typical)
Viewing Angle	
Horizontal	+/- 85 degrees
Vertical	+/- 85 degrees
Inputs	
Video	
Composite (CVBS)	two (side and bottom)
S-Video	two (side and bottom)
Component	two (bottom)
Wide LCD monitor In (coaxial)	one (bottom)
Audio (RCA L+R)	7 pair
DVI (also can use as computer monitor)	1 (bottom)
D4	1 (bottom)
Computer	
VGA (for use as computer monitor)	1 (bottom)
Audio(PC)	1 (bottom)
Other	
Card reader	one (side)
Outputs	
Video	
Composite (CVBS)	one (bottom)
Audio (RCA L+R)	one pair
Headphone	one (side)

Audio	
Effects	SRS TruSurround XT
	Midnight Mode
Speakers (integrated)	15 watts/channel
	30 watts total

Index

A	C	location of, 56	
About	Cables, 57	power, 56 quality, 61	
side connectors, 53 side panel buttons, 53	Card reader, 55 supported cards, 78	side panel, 55 S-Video, 61, 64	
Wide LCD Monitor, 53 Adjust, 76	Channel, 78		
brightness, 75	Cleaning, 59	D	
color, 75	Coax, 63	_	
Antenna, 63	Component, 65	DVI-HDCP, 66	
Audio, 76	Connecting an Antenna, 63		
effects, 76	Connecting Cable	F	
stereo, 76	coax, 63	Factory settings	
Back cover removal, 66, 67 Button	Connecting devices Cable box, 61 camcorder, 61 DVD player, 61 Satellite box, 61 VCR, 61	restore, 78 H headphones, 55	
lock, 78	Connector		
unlock, 78	VGA, 67	ı	
Buttons channel up and down, 54 channels, 70	Connectors, 55 AV1, 55 AV2, 55, 56	Input Select Input sources, 74	
Enter, 70 Input Source, 54	AV4, 56 AV5, 56	Input Source, 70 rename, 78	
OSD, 54 PIP, 70	AV6, 56 coax, 56, 61	IR receiver, 53	
power, 54 remote control, 70	component, 56, 61, 65 composite, 61, 63		
Side panel, 54	DVI, 66	М	
volume, 54, 70	DVI HDCP, 61	Midnight Mode, 76	
	DVI-HDCP, 56, 66	Monitor, 67	

0	R	
On-Screen Display, 73	Remote	
OSD, 70, 73	Univeral remote, 72	
appearance of, 78 Audio, 76 card reader, 78 Input Select, 74	Remote control, 73 batteries, 69 buttons, 70 problems with, 87	
language, 74 Main Menu, 73 messages, 86	using, 69	
PBP, 76	S	
Picture, 75 PIP, 76	Self Test, 88	
POP, 76	setup, 78	
remote control, 73	Sleep Timer, 77	
setup, 78 sleep timer, 77	Specifications, 91	
using, 73	SRS, 76	
<i>6</i> /	S-Video, 64	
P		
Package contents, 57	T	
Picture-By-Picture, 76	Troubleshooting, 81	
Picture-In-Picture, 76	computer, 88 general problems, 82	
Picture-Outside-Picture, 76		
Power indicator amber light, 53 blue light, 53	OSD, 86 remote control, 87 self test, 88	
Power light amber, 53 blue, 53	U	
Problems remote control, 87	Univeseral remote, 72	

VGA, 67

W

Wide LCD Monitor connectors, 61 location, 61 set up, 61

Wide LCD Monitor, 81